


Leaf Type – Fire Rated


Panel Type	Core	Face Finish	Capping	Thickness
Fire Rated -/60/30SM	Fire Core	Paint Finish	RCD Aluminium Cap	52
Fire Rated -/60/30SM	Fire Core	HPL Finish	RCD Aluminium Cap	52

Leaf Capping Options

Single Fire-Rated Door

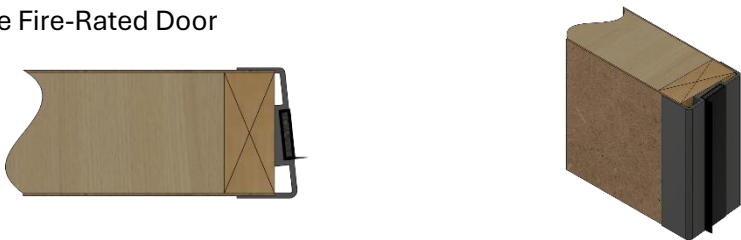


Double Fire-Rated Door

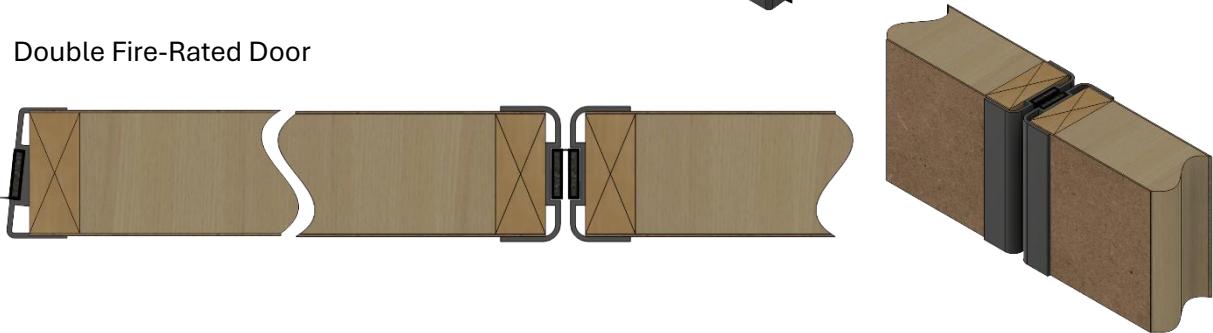


Door Jamb Type

RCD 1 Piece Steel Jamb, Powder Coated


RP120/ RP150 Perimeter Seal

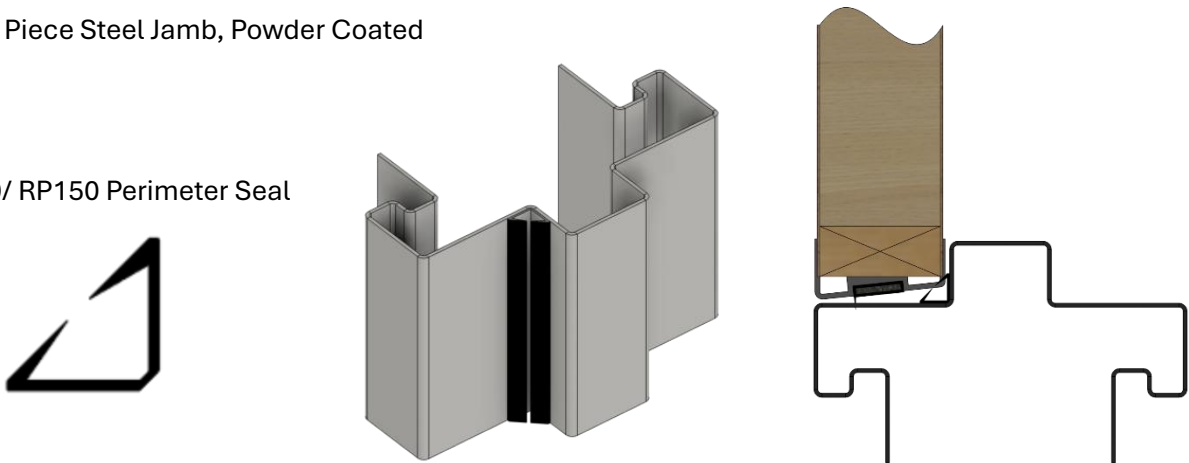

Fixing Positions

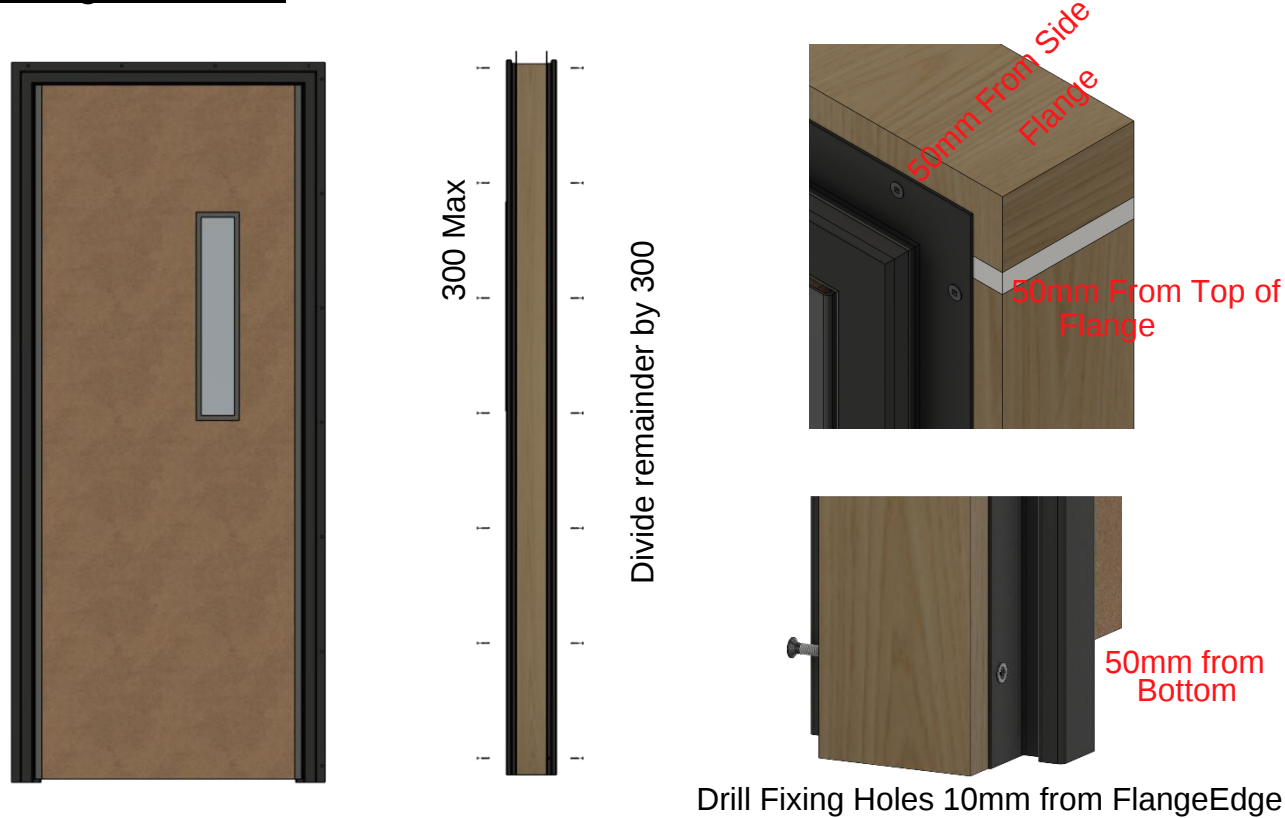

Bottom View

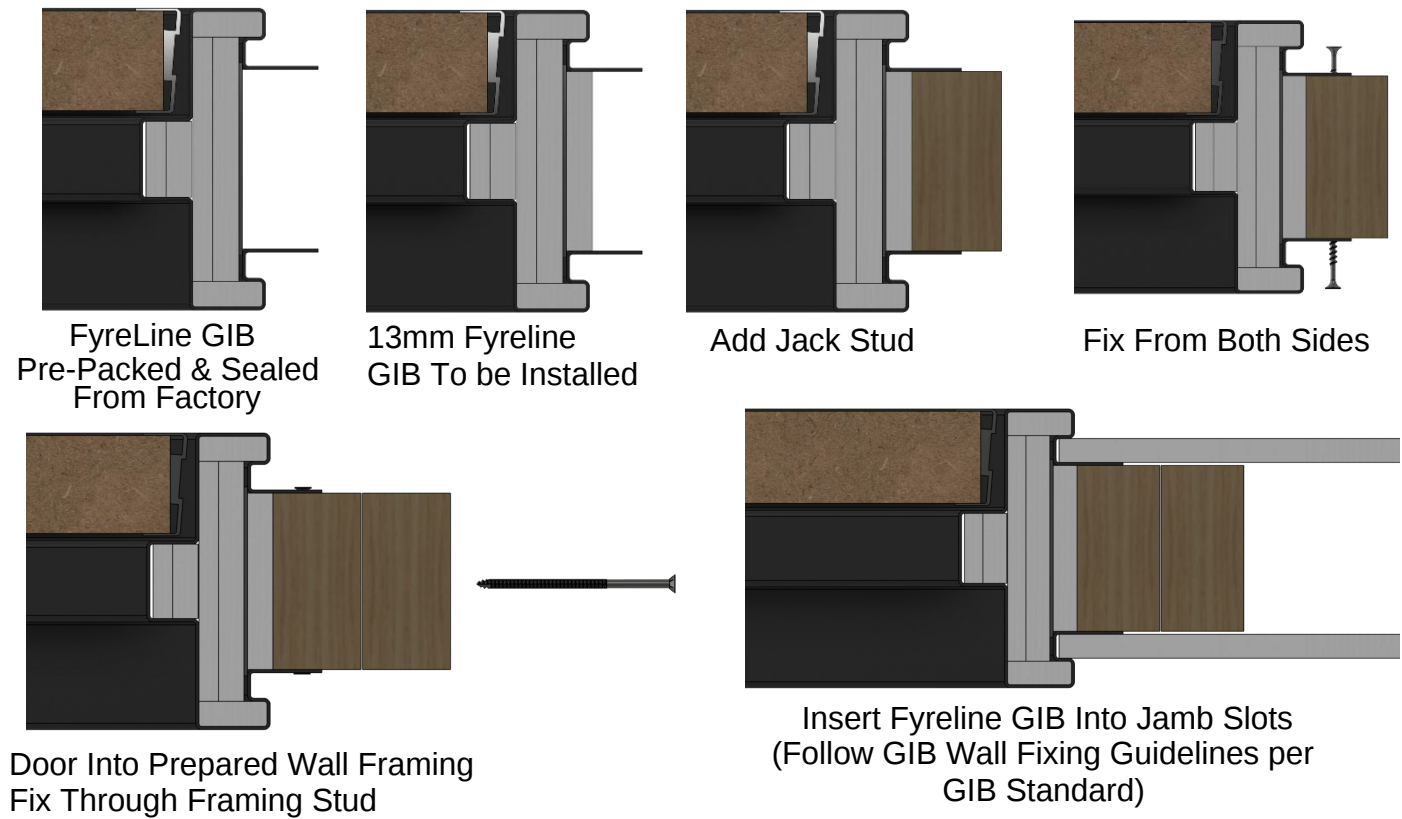

Fire Door Into Wall Frame



Add Jack Studs To Sides
and from Fix Both Sides




Add 13mm Fyreline
GIB On Top of Frame



Add Jack Stud To Top
and from Fix Both Sides



Fully Prepared Fire Door
To Go Into Wall Frame

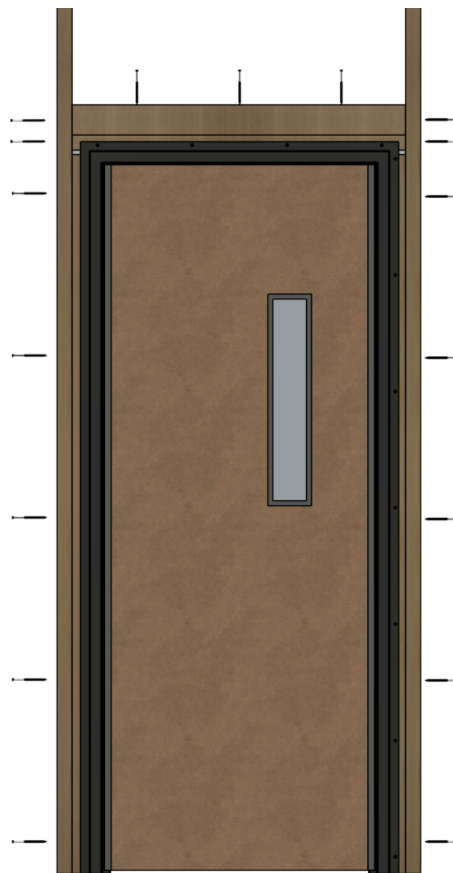


Fix Prepared Fire Door
Through Framing Studs
& Lintels

Fyreline GIB Installation




Insert Fyreline Gib Into Frame
GIB Groove All Sides

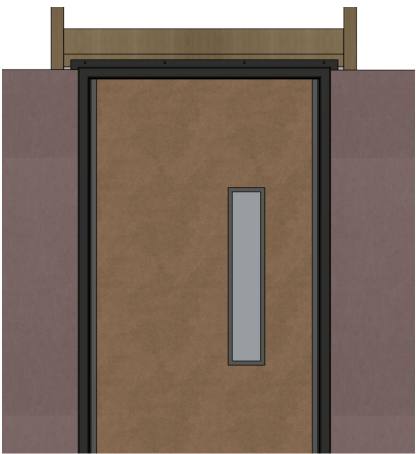

Fyreline GIB Installed
Both Sides



Align Fyreline Gib With Top
GIB Groove

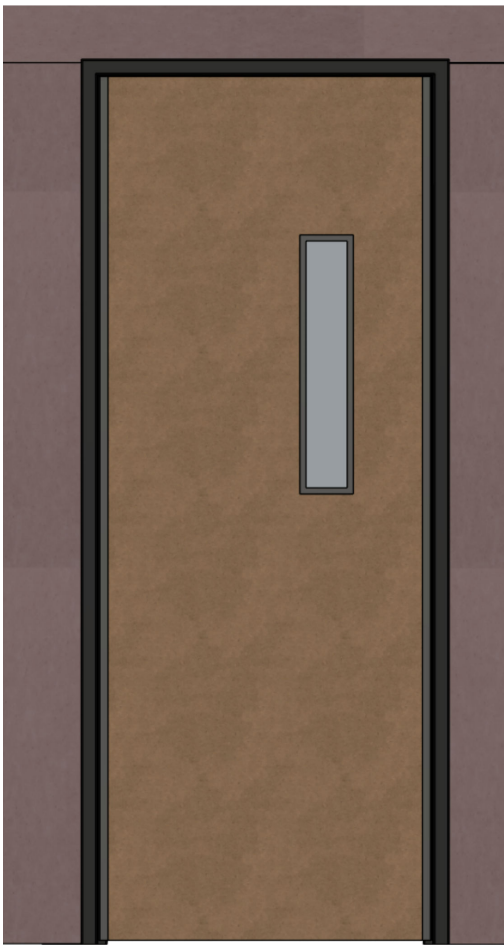

Fully Installed Fire Door



Add Fyreline GIB Into Top GIB Groove